



As each panel is installed, fold the end clip under the central section and align with panel tabs.

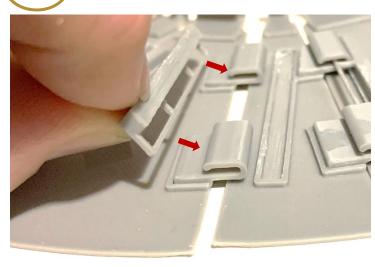


Glue tab in place, then move onto the next panel, repeating steps A to C until coming to the final panel.




For the final panel, insert the unused bar section into the clips and fold over.

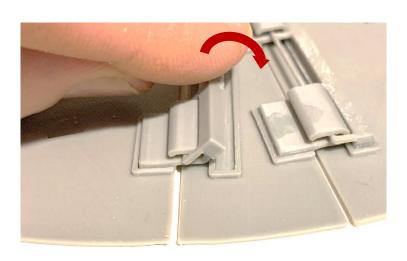

Secure with glue, completing the assembly.

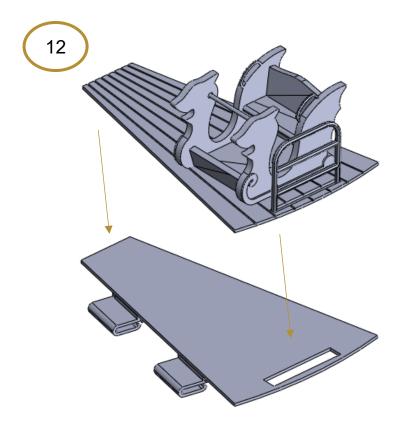

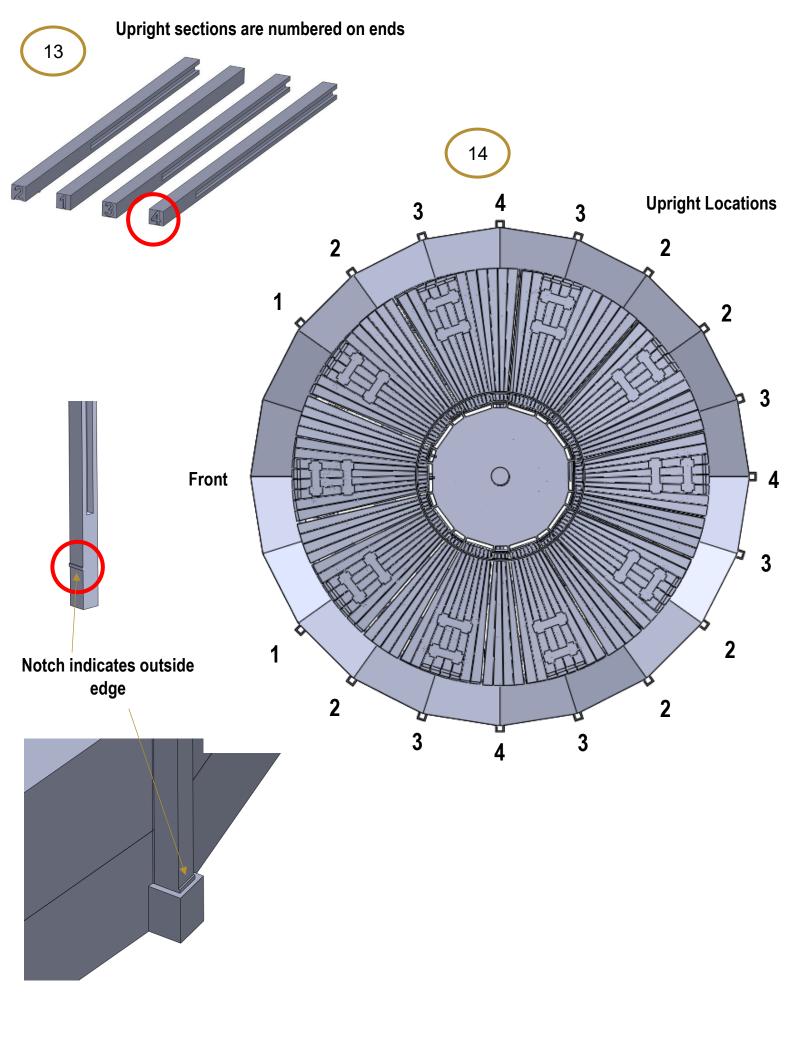



## Position all fence sections in place to confirm positions before securing with glue

