



As each panel is installed, fold the end clip under the central section and align with panel tabs.

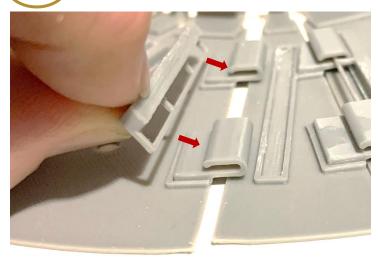


Glue tab in place, then move onto the next panel, repeating steps A to C until coming to the final panel.



For the final panel, insert the unused bar section into the clips and fold over.

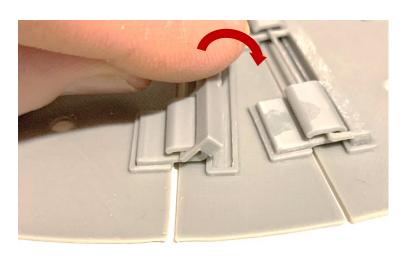


Secure with glue, completing the assembly.

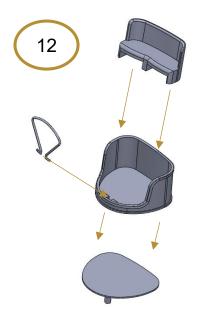


14


To prevent car spinning, use cap instead of turn cog.

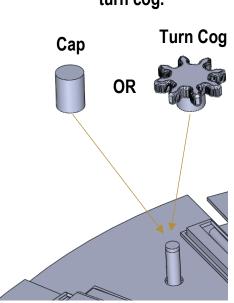

Use minimal glue to allow car to turn freely.

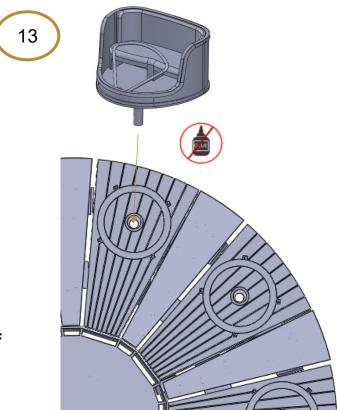



Turn Piece





Both positions do not need to be used, test run the model with each configuration, until you are satisfied with the outcome.

They do not need to be glued in place.

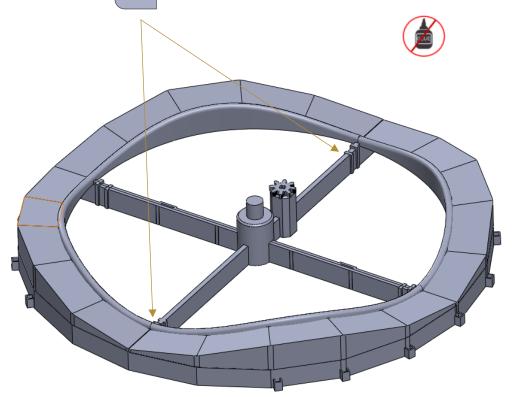

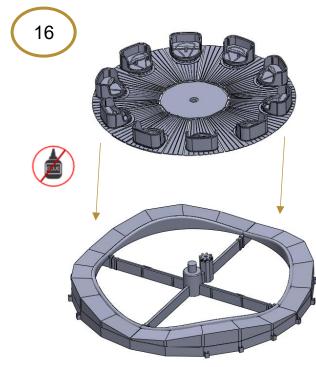

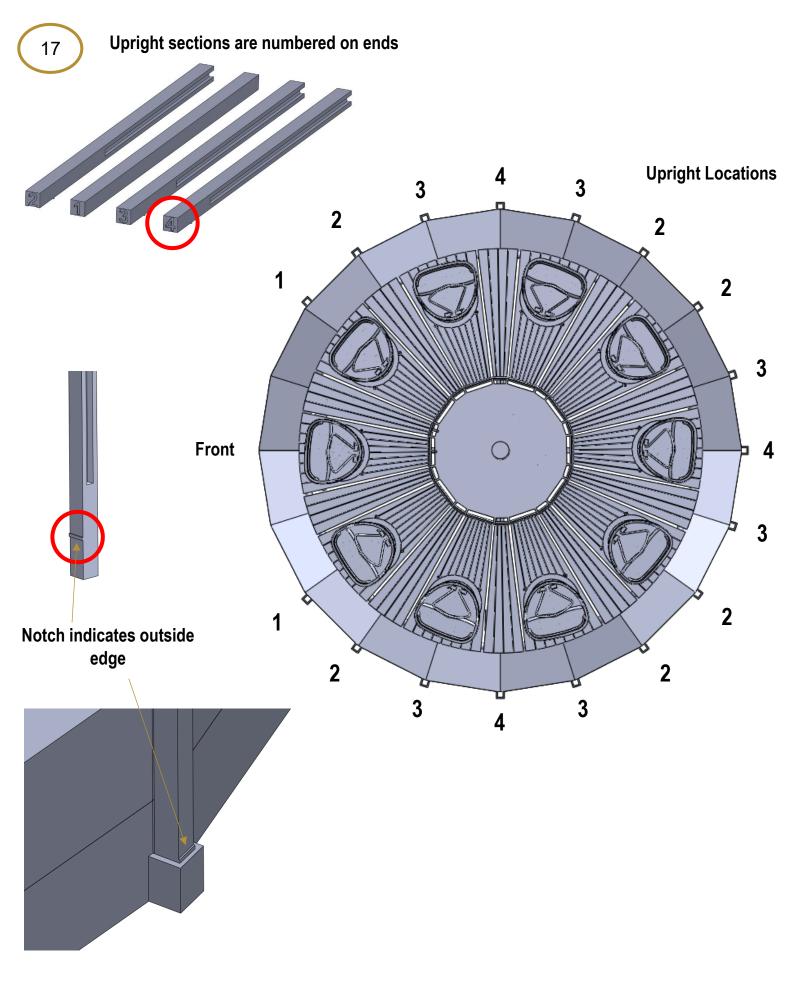

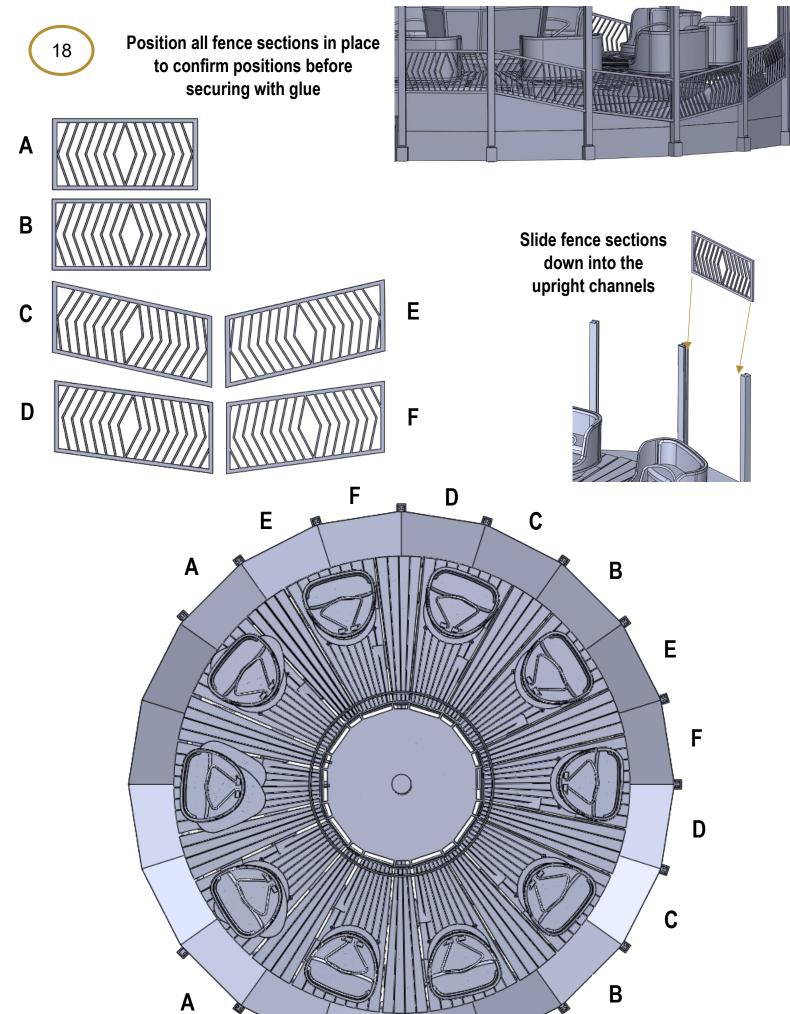



Ε


F

D

C

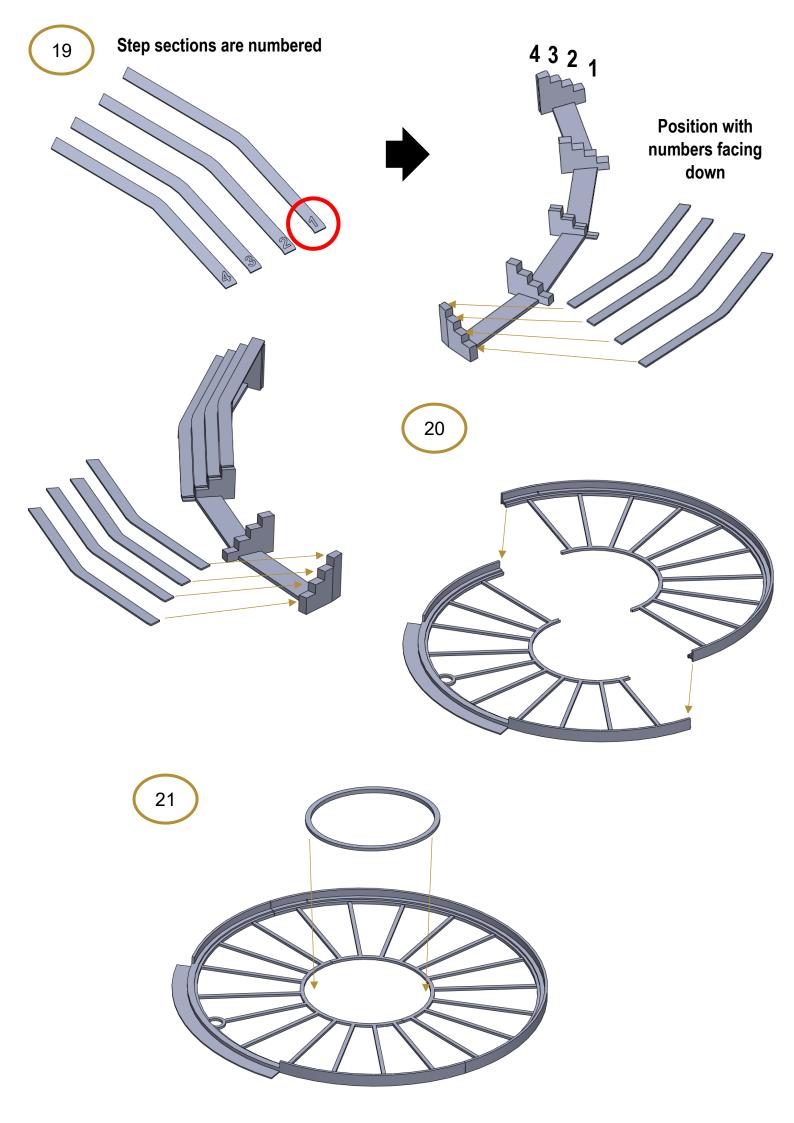

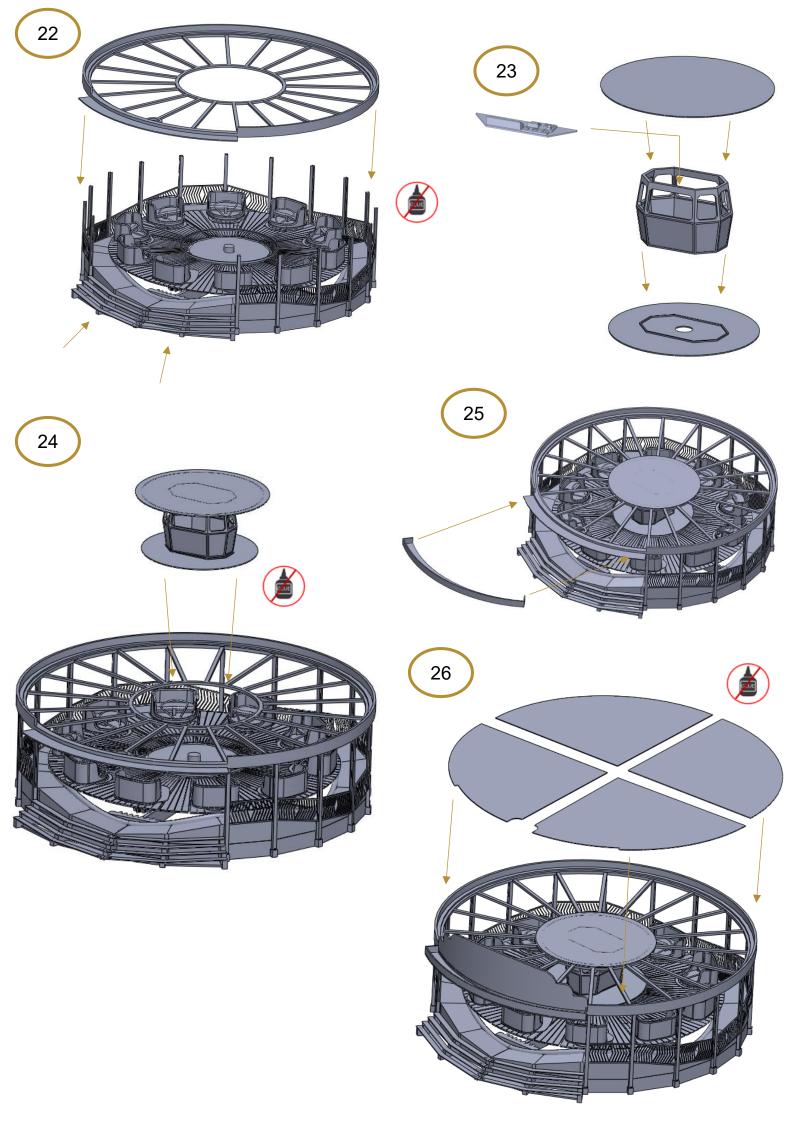

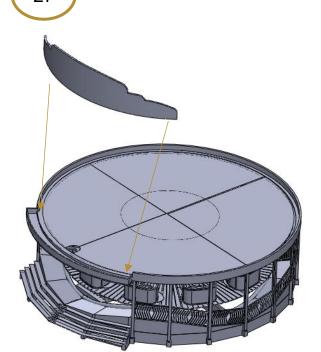



1





2

Screw lid tight to turn on, reverse to turn off

3

