1

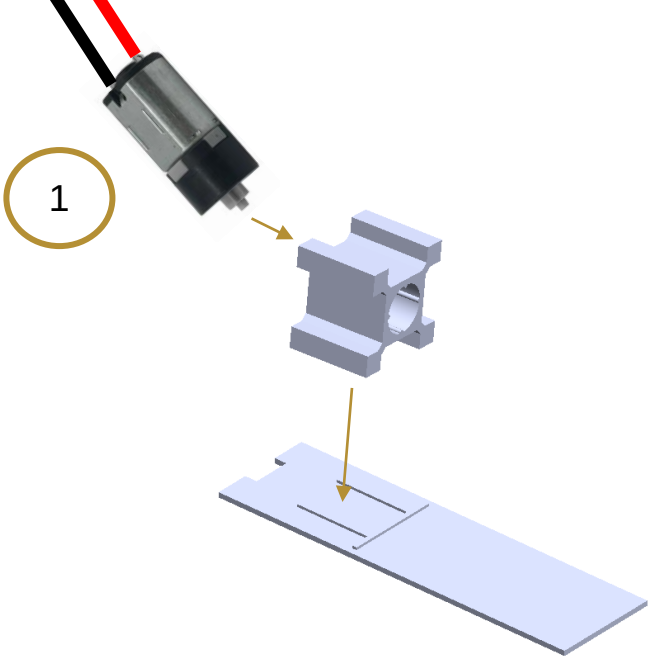

2

Use minimal glue to ensure

Mechanism is free to turn

x2

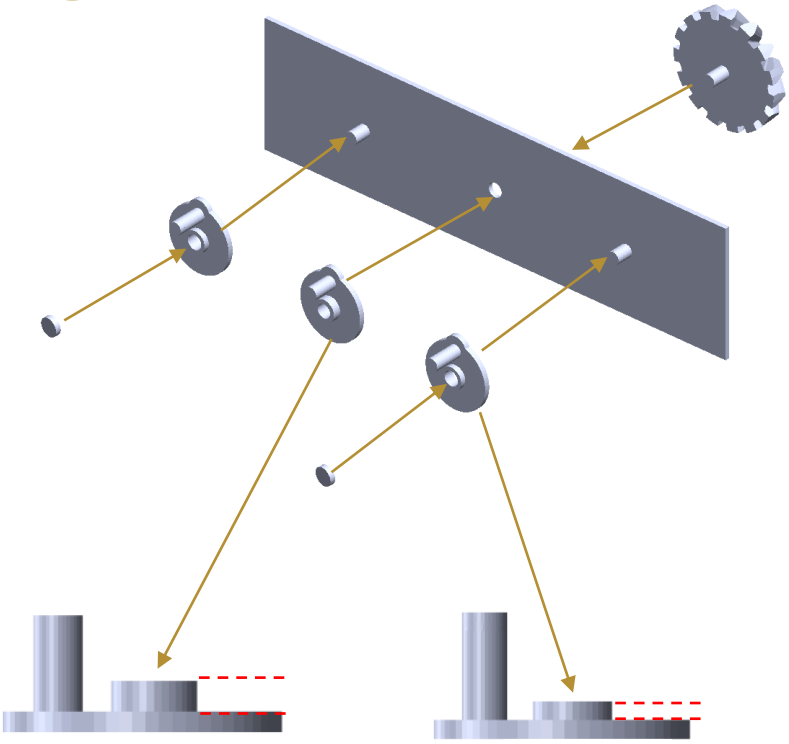

Centre

Left/Right

Observe correct cam position

3

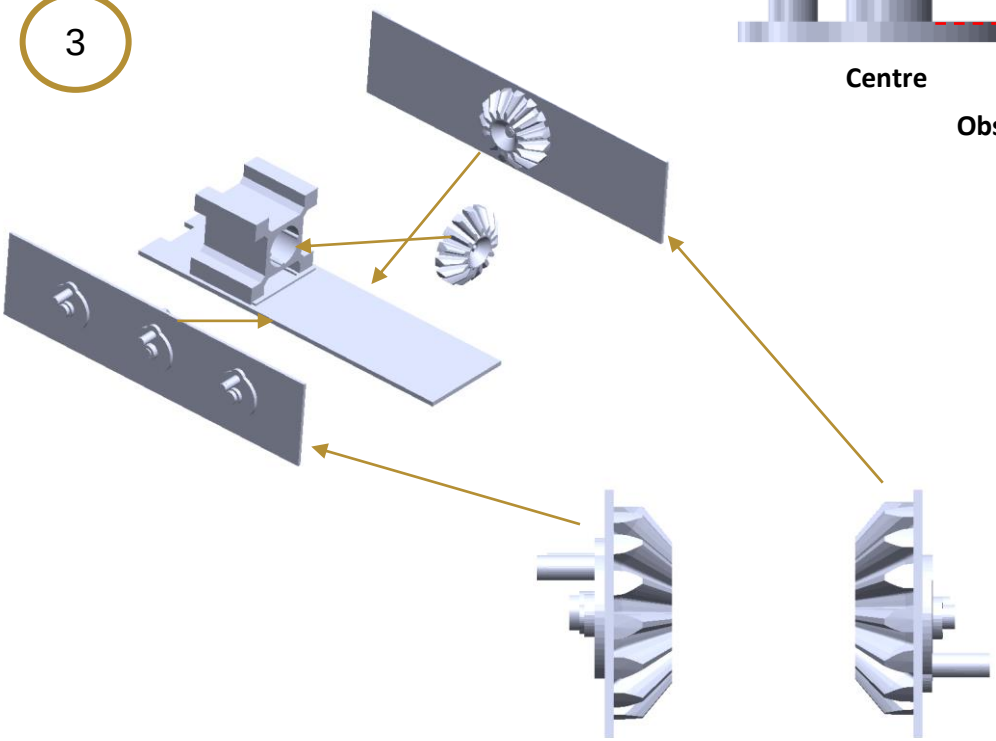

Install cams on each side in opposite directions

4

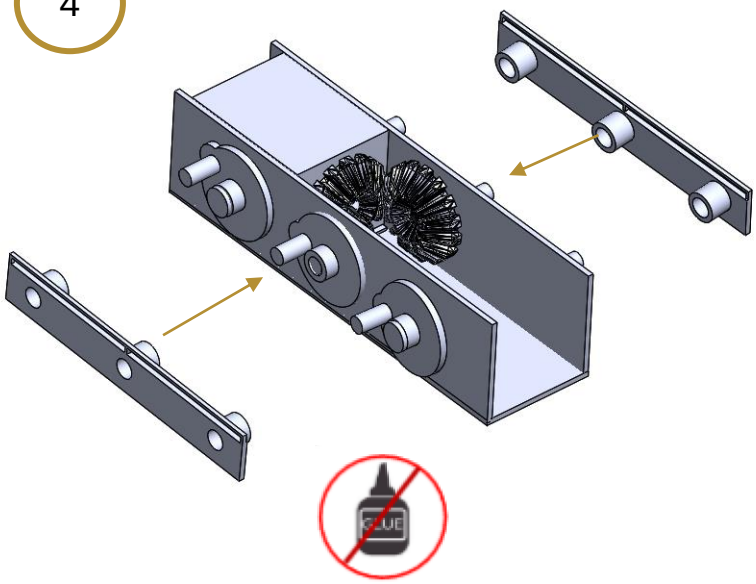

5

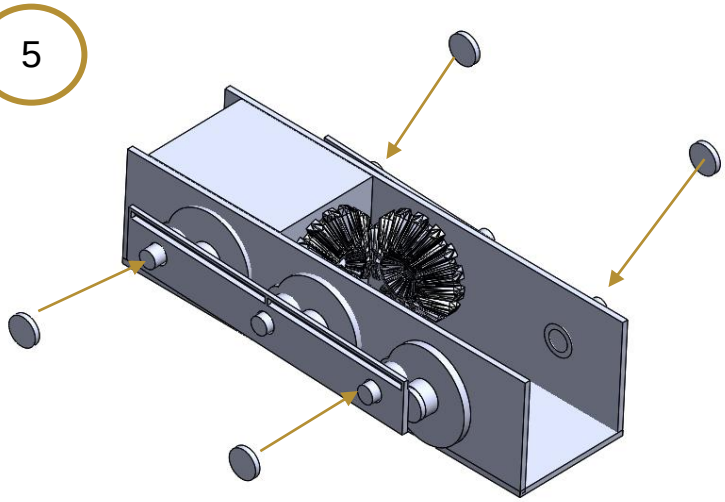

Use minimal glue to ensure mechanism is free to turn

6

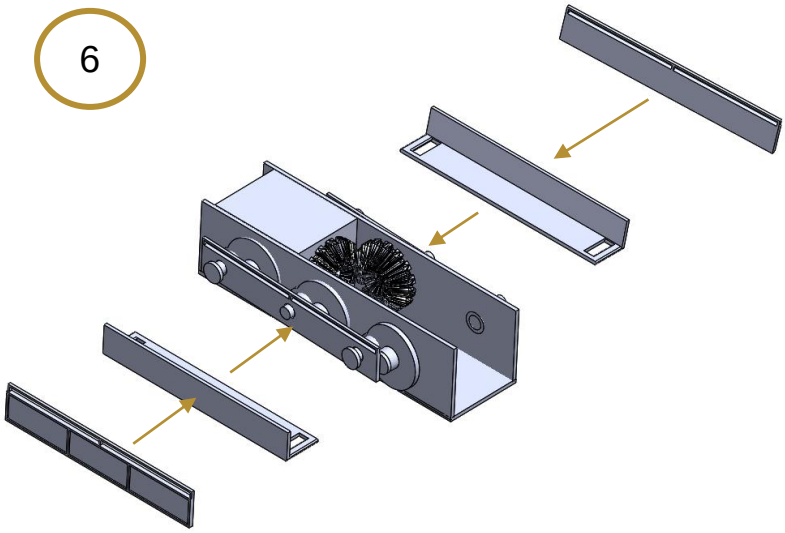

7

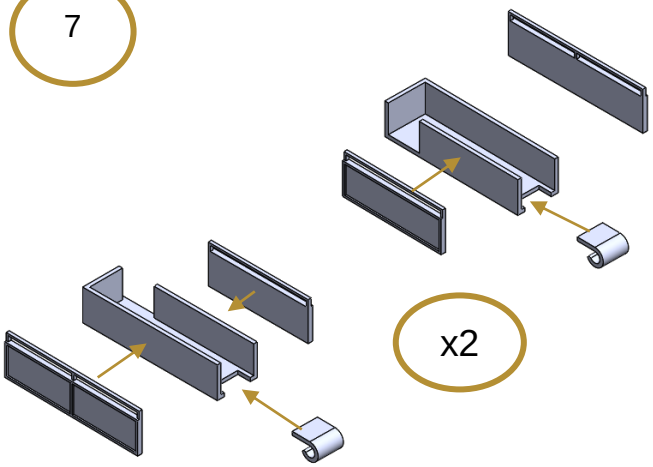

11

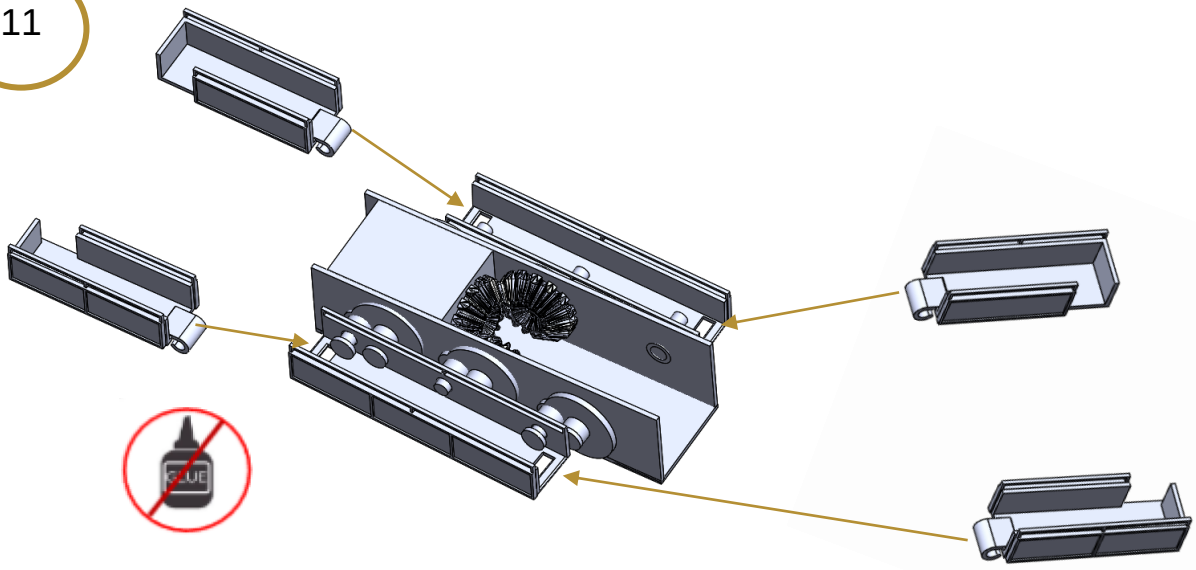

12

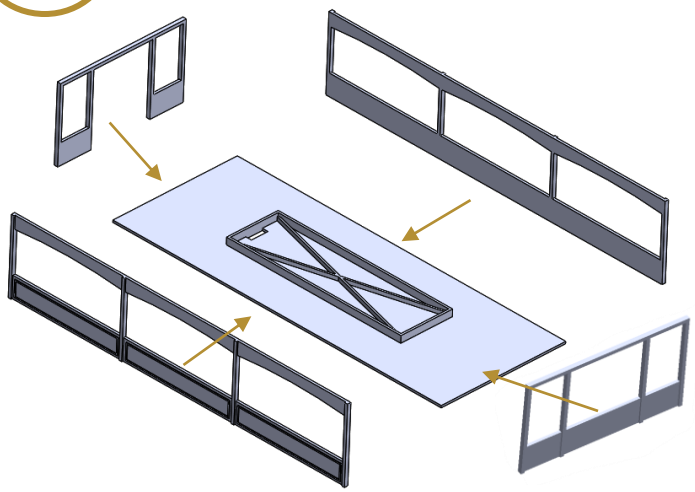

13

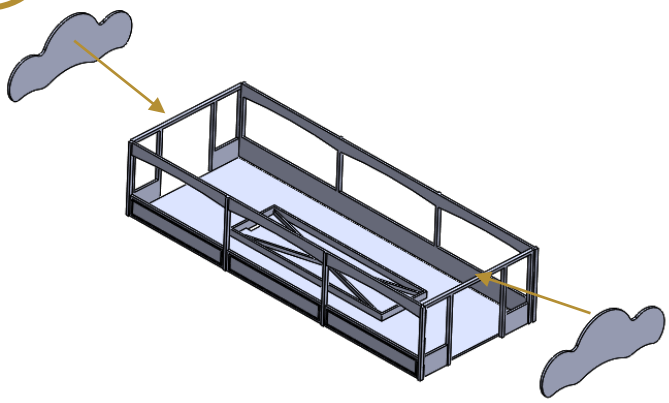

14

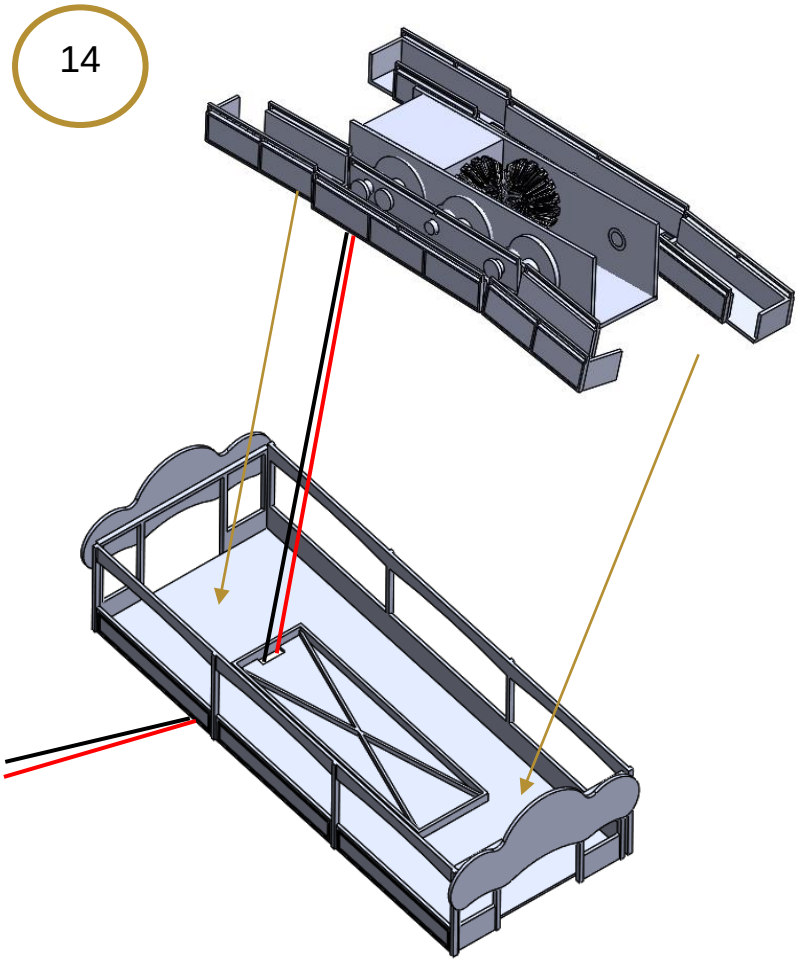

15

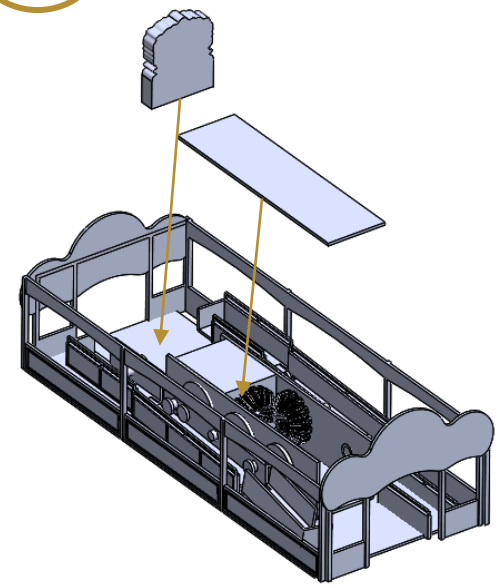

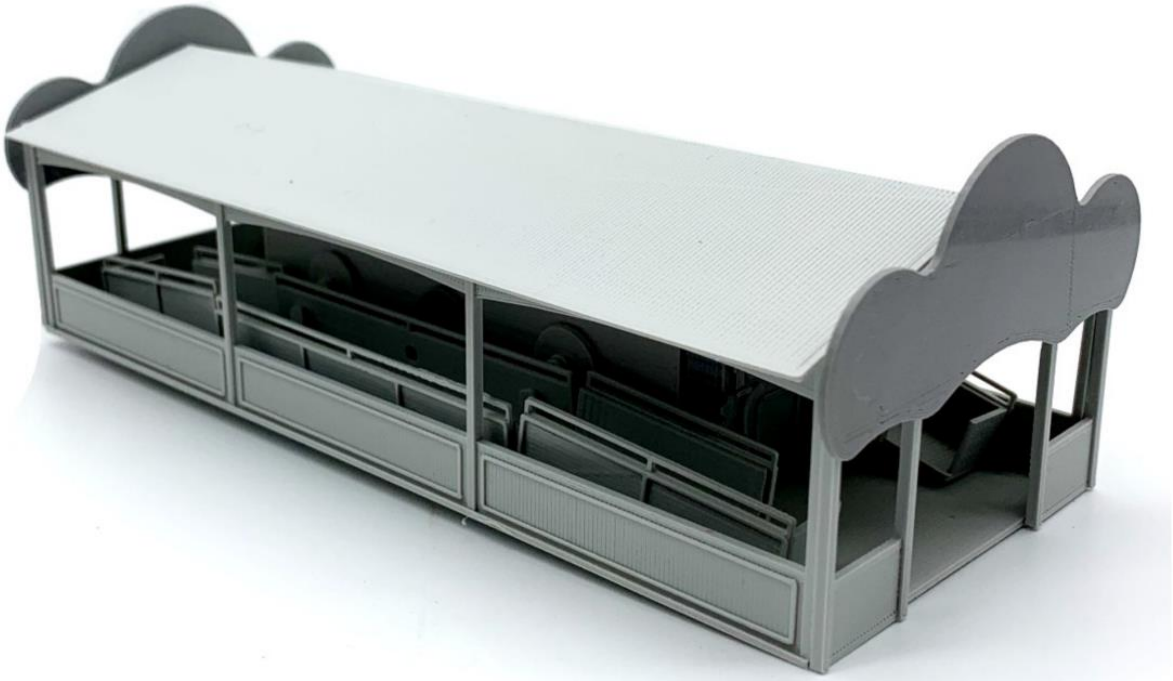

DAPR